

CERTIFICATE OF CALIBRATION


ISSUED BY: LAMBDA CALIBRATION LTD

DATE OF ISSUE: 9th October 2026

CERTIFICATE No: 1019315



0495

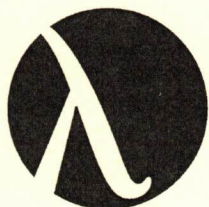

Lambda
CALIBRATION LTD

11-13 Chorley Central
Business Park
Stump Lane
Chorley
PR6 0BL
Tel: 01257 244 670

Page 1 of 3

APPROVED SIGNATORY


C Reed E Santos R Armitage
K Quigley D Pilkington

Customer: DJB Labcare Ltd, Newport Pagnell, MK16 9QS
Item No: 230096
Description: Frequency Counter
Model/Range: PFM1300
Manufacturer: TTi
Date of Cal: 09/10/2026
Basis: E-900
Equipment Used: GPS Frequency Reference (LGPS), Function Generator (LFG-02, LSG-03)
Temp/Humidity: 20°C ± 2°C, <80%rh

Initial Inspection on Receipt: (For information only – not part of our UKAS accredited schedule).

Unit Under Test (UUT) Condition	Functional.
Condition of Supplied Leads	None Supplied.
Battery	Functional.

Summary of Results:

Pre Calibration Status	The reported results fall within the specified tolerances
Post Calibration Status	The reported results fall within the specified tolerances
Adjustments	No
Repairs	No
Test Leads Used	Laboratory test leads were used in the calibration.
Comments	Certificate includes customer requested measurement points of 10, 50, 100, 300, 700, 1M, 5M, 10M & 100MHz.

Measured results and measurement uncertainties are detailed on the following pages.

The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor $k=2$, providing a coverage probability of approximately 95%. The uncertainty evaluation has been carried out in accordance with UKAS requirements. Unless otherwise stated: [1] The 'Compliance Statement' is based on 'simple acceptance' (result vs tolerance) with the relevant calibration uncertainty being no greater than the tolerance. [2] Reported activities were carried out at the address detailed in the header. [3] The results relate only to the items calibrated. This certificate is issued in accordance with the laboratory accreditation requirements of the United Kingdom Accreditation Service. It provides traceability of measurement to the SI system of units and / or to units of measurement realised at the National Physical Laboratory or other recognised national metrology institutes. This certificate may not be reproduced other than in full, except with the prior written approval of the issuing laboratory.

CERTIFICATE OF CALIBRATION

ISSUED BY: LAMBDA CALIBRATION LTD

UKAS ACCREDITED CALIBRATION LABORATORY No: 0495

CERTIFICATE No:

1019315

Page 2 of 3

Frequency Accuracy (Input A)

UUT Range	UUT Gate	Applied Frequency (Hz)	UUT Indication (Hz)
Freq A	10s	10.0000000	10.000014
Freq A	10s	50.0000000	50.000073
Freq A	10s	100.000000	100.00014
Freq A	10s	300.000000	300.00044
Freq A	10s	500.000000	500.00073
Freq A	10s	700.000000	700.00102
Freq A	10s	1.00000000k	1.0000014k
Freq A	10s	1.00000000M	1.0000014M
Freq A	10s	5.00000000M	1.0000014M
Freq A	0.1s	10.00000M	10.0000M
Freq A	1s	10.000000M	10.00001M
Freq A	10s	10.0000000M	10.000014M
Freq A	1s	25.0000000M	25.000035M

Frequency Accuracy (Input B)

UUT Range	UUT Gate	Applied Frequency (MHz)	UUT Indication (MHz)
Freq B	10s	20.0000000	20.000028
Freq B	10s	100.0000000	100.00017
Freq B	10s	500.000000	500.00087
Freq B	0.1s	1000.0000	1000.001
Freq B	1s	1000.00000	1000.0017
Freq B	1s	1300.00000	1300.0023
Freq B	10s	1300.000000	! 300.00225

! Denotes overflow arrow symbol illuminated.

Period Accuracy (Input A)

UUT Range	UUT Gate	Applied Time Period (s)	UUT Indication (s)
Period A	0.1s	1000.0000μ	999.999μ
Period A	1s	1000.00000μ	999.9986μ
Period A	10s	1000.000000μ	999.99853μ

Manufacturers Tolerance applicable to above results: ±(1 digit + Timebase Accuracy (7ppm))

End of Results

Estimated Uncertainty of Measurement:

Frequency: ±(0.29ppm + 1.5μHz + 2 digits)